

Important Safety Instructions

**PLEASE READ THESE SAFETY INSTRUCTIONS
BEFORE USING THIS AIR CLEANER.**

WARNING: DO NOT LOOK DIRECTLY INTO THE UV LAMP


1. Read all instructions before operating the air cleaner.
2. Inspect unit prior to use! Do not use a product that has been damaged in any way.
3. Place air cleaner in a suitable outlet where it cannot easily be damaged.
4. Always turn the air cleaner to the "OFF" position and unplug from the wall outlet when not in use.
5. To disconnect the air cleaner, first turn power switch to the "OFF" position, grip the air cleaner and pull it from the wall outlet.
6. Do not use the air cleaner outdoors.
7. Never use the air cleaner unless it is fully assembled.
8. Do not use the air cleaner where combustible gases or vapors are present.
9. Do not expose the air cleaner to rain, or water. A unit that was submerged in water should not be operated due to risk of shock.
10. The air cleaner must be used in its upright position.
11. Do not allow foreign objects to enter ventilation or exhaust opening as this may cause electric shock or damage to the air cleaner. Do not block air outlets or intakes.
12. A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
13. Disconnect power supply before servicing.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

**WARNING: To Reduce The Risk of Fire or Electric Shock, Do Not Use This Air Cleaner
With Any Solid-State Speed Control Device.**

Parts

1. FRONT GRILLE
2. AIR INTAKE
3. ELECTROSTATIC FILTER
4. ULTRAVIOLET LAMP
5. FILTER REPLACEMENT CALENDAR
6. UV / ON / OFF SWITCH
7. AIR DISCHARGE
8. ROTATING PLUG

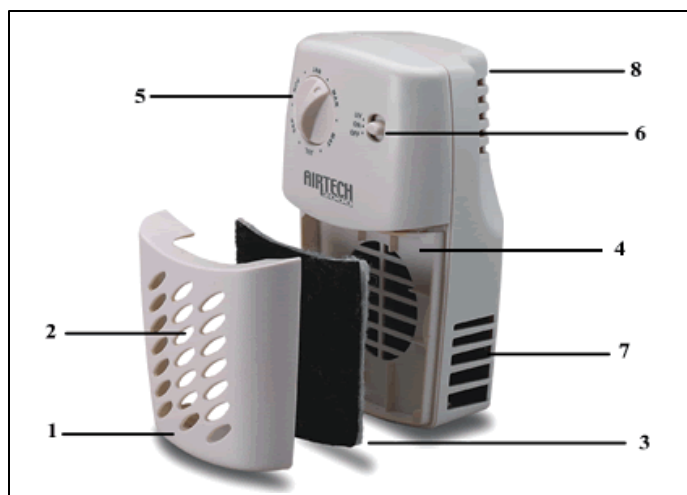

Using Your Air Cleaners

1. Unplug the air cleaner and open the front cover of the air cleaner.
2. Remove the filter from the plastic wrap and place the electrostatic filter into the air cleaner.
3. Close the cover of the air cleaner.
4. Move the filter replacement calendar forward three months.
5. Plug the air cleaner into the electrical outlet.

Note: Electrical outlets in older homes may not hold the air cleaner securely. If the air cleaner seems loose in the outlet, please contact a qualified electrician to replace the obsolete outlet.

6. Slide the power switch to "ON" to turn on the air cleaner.
 7. Slide the power switch to "UV" to turn on the air cleaner and the UV Lamp.
- The air cleaner is most effective when you locate it closest to the odor. However, the air cleaner may not eliminate strong odors.

Note: Do not block the air discharge area.

Replacing The Electrostatic Filter

The air cleaner is most effective when the filter is replaced every three months.

1. Switch the air cleaner off and unplug it from the outlet.
2. Gently lift the front grille cover off the main body of the air cleaner.
3. Remove the old filter and replace it with a new filter.
4. Snap the front grille cover back onto the main body of the air cleaner.
5. Move the calendar forward three months each time you replace the filter.
6. Plug the unit into a suitable outlet and switch it on.

Rotating The Plug

1. Use a small screwdriver to remove the screw on the back of the air cleaner.
2. Rotate the plug 90 degrees counter-clockwise
3. Replace the screw and tighten it using the screw driver.

Cleaning The Air Filter

1. Unplug the air cleaner before cleaning.

Note: This air cleaner does not disassemble.

2. Wipe the surface using a soft, damp cloth.

Important: Do not immerse the air cleaner in water. Do not use gasoline, paint thinner or other chemicals to clean the air cleaner. Store your air cleaner in a clean, dry place.

Replacing The UV Bulb

Please follow the directions closely to avoid damage to the unit and the bulb!

1. Remove the front grille and the filters and place them on the side.
2. Remove the 4 screws from the back of the air cleaner. There is one screw on each corner do not remove the screw used to rotate the plug direction.
3. Place the unit on a flat surface face down with the top of the unit facing you. Carefully remove the back of the unit flipping it over to the right.
4. Locate the bulb in the center of the unit; remove the bulb by holding on to the rubber base of the bulb.
5. Remove the 2 white wires connected to the base of the bulb and dispose of the old bulb properly.
6. Remove the new bulb from its packaging **DO NOT TOUCH THE GLASS END OF THE BULB** this may shorten the life of the bulb. Connect the 2 white wires to the 2 pins at the base of the bulb.
7. Place the bulb back in the unit making sure the top of the bulb slides securely into the black sleeve and the bottom fits securely into the space provided.
8. Close the unit back up ensuring the edges line up properly and secure the screws, replace filter and front grille.
9. If you have problems replacing the bulb we provide a free bulb replacing service (shipping charges apply), call us toll free @ 866 2 EXA-MED.

Warranty Information

The AIRTECH 2000 comes with a 1 year limited manufacturer warranty.

The AIRTECH 2000 is covered for defects in material or workmanship for a period of one year from date of purchase. The UV light is covered for a period of one year with a prorated replacement cost.

The warranty does not cover a defect that resulted from improper or unreasonable use or maintenance, accident, improper packing, or unauthorized tampering, alteration or modification. The provisions of this warranty are in lieu of any other expressed or implied including any warranty of merchantability or fitness for a particular purpose. The manufacturer maximum liability shall not exceed the actual purchase price of the product. In no event shall the manufacturer be liable for incidental consequential or indirect damages. For support, service and warranty information contact us toll free at 866-2 EXA MED. We are available to serve you 9am-4pm EST Monday through Friday. Our support staff is also available online at www.exa-med.com or by E- mail support@exa-med.com.

Or by mail:
Customer Service
Exa-Med
2365 SW 34 Street Unit 2
Ft Lauderdale FL 33312

In order to get your AIRTECH2000 serviced or replaced under the terms of the warranty you must present a proof of purchase.